

Operating Manual

No. OM-BP003

Rev June 2021

Model

AA-40

Assy No:

A201236



AIRBLAST

Surface Treatment Solutions

| BRISBANE | PERTH | MELBOURNE |

airblastaustralia.com

AA-40

OPERATING
MANUAL

| Section | Description | Page |
|---------|-----------------------------------|------|
| 1 | Important Information | 3 |
| 2 | How the Auto Exhaust System works | 5 |
| 3 | Initial Set Up | 6 |
| 4 | Operation | 8 |
| 5 | Shut Down And Storage | 11 |
| 6 | Preventative Maintenance | 12 |
| 7 | Troubleshooting | 14 |
| 8 | Replacement Parts | 15 |
| 8.1 | Bare Pot Assembly | 15 |
| 8.2 | Pot Package A | 16 |
| 8.3 | Auto Exhaust Piping Assembly | 18 |
| 8.4 | Air Control Valve Assembly | 20 |
| 8.5 | Air Control Valve Service Kit | 22 |
| 8.6 | Exhaust Valve Assembly | 22 |
| 8.7 | Exhaust Valve & Muffler Assembly | 23 |
| 8.8 | Exhaust Muffler Assembly | 24 |
| 8.9 | Exhaust Control Line Assembly | 25 |
| 8.10 | Pusher Line Assembly | 25 |
| 8.11 | Micro Valve Assembly | 26 |
| 8.12 | Micro Valve Service Kits | 27 |
| 8.13 | Twinline Hose Assembly | 27 |
| 8.14 | Moisture Trap Assembly | 27 |
| 8.15 | Deadman Handle Assembly | 28 |

AIRBLAST AUSTRALIA **The right people, the right solutions**

CONTACT YOUR NEAREST OFFICE FOR FULL AFTER-SALE SERVICE AND SUPPORT

Brisbane

Unit 1 / 272 Lavarack Ave,
Pinkenba, QLD 4008
Phone: 1300 247 111
sales@airblastqld.com.au
Mon – Fri/ 7:30 AM – 4:30 PM

Melbourne

18a Southfork Drive
Kilsyth Vic 3137
Phone: 1300 247 111
sales@airblastvic.com.au
Mon – Fri/ 8:30 AM – 5:00 PM

Perth

Unit 5, 16-18 Kewdale Rd, Kewdale, WA, 6105.
Phone: 1300 247 111
sales@airblastwa.com.au
Mon – Fri / 8:00 AM – 5:00 PM



IMPORTANT – READ THIS INFORMATION CAREFULLY PRIOR TO OPERATING THE EQUIPMENT. ALL ABRASIVE BLASTING OPERATIONS ARE DANGEROUS AND CREATE A HAZARDOUS ENVIRONMENT. FAILURE TO COMPLY WITH THIS INFORMATION MAY CAUSE SERIOUS INJURY OR DEATH.

Section 1.0

Important Information

- 1.1 All products and equipment sold Airblast are intended for use by experienced users of abrasive blasting equipment, and its' associated operations and abrasive blasting media.
- 1.2 It is the responsibility of the user/purchaser/distributor to:
 - 1.2.1 Determine if the equipment and abrasive media is suitable for the users intended use and application.
 - 1.2.2 Familiarize themselves with any appropriate laws, regulations and safe working practices which may apply within the users working area/environment.
 - 1.2.3 Provide appropriate operator training and a safe working environment, including operator protective equipment such as, but not limited to, safety footwear, protective eyewear, hearing protection, and respiratory protection where applicable.
- 1.3 No representations are made or intended as to the useful life, maintenance cycles, efficiency or performance of the reference products or any combination of products.
- 1.4 Information contained herein must not be used for estimating purposes. Production rates, labour performance and surface finishes are the sole responsibility of the user.
- 1.5 Read all instructions carefully prior to operating this equipment, and do not allow it to be operated by inexperienced, untrained or unauthorised personnel.
- 1.6 Ensure that the equipment is correctly serviced and maintained as specified in this manual, and that only Airblast replacement parts are utilised. Failure to use genuine replacement parts may void your warranty.
- 1.7 All pressure vessels (where supplied) are designed, manufactured and certified in accordance with Australian Standard AS1210. A copy of this certification will be supplied with this manual if applicable. Do not weld, grind or drill any


pressure vessel, as this will void the certification and warranty, and may weaken the vessel causing a catastrophic failure.

- 1.8 This equipment is not designed for use in areas designated as hazardous. Contact your local Airblast office/representative prior to operating this equipment in a hazardous area.
- 1.9 All compressed air fittings, connections and hoses must be in good condition, fit for purpose, correctly sized and fitted, and carefully inspected prior to use.
- 1.10 Breathing airborne dust from any abrasive media may cause lung disease or other serious injury. Always wear suitably designed respiratory protection when handling any abrasive media, and when in the immediate area during any abrasive blasting operation.
- 1.11 Static electricity may be generated during any abrasive blasting operation. All equipment should be well grounded/earthed to prevent electric shock and reduce the risk of spark generation.
- 1.12 All Supplied Air Respirators (i.e.: blasting helmets) where used must comply with the requirements of AS/NZS 1716:2003, and must be supplied with breathing air as specified in AS/NZS 1715:2009 or higher, at a flow rate between 170l per minute (6cfm) and 425l per minute (15cfm) at all times, depending on the number of operators.

Section 2.0

How the Auto Exhaust System works

- 2.1 When the compressed air supply is connected to the blast pot, and the supply ball valve is opened, the air supply passes through the water trap and stops at the air control valve which is closed. The air will also travel down the input side of the twin-line hose, as far as the deadman handle, which is also closed.

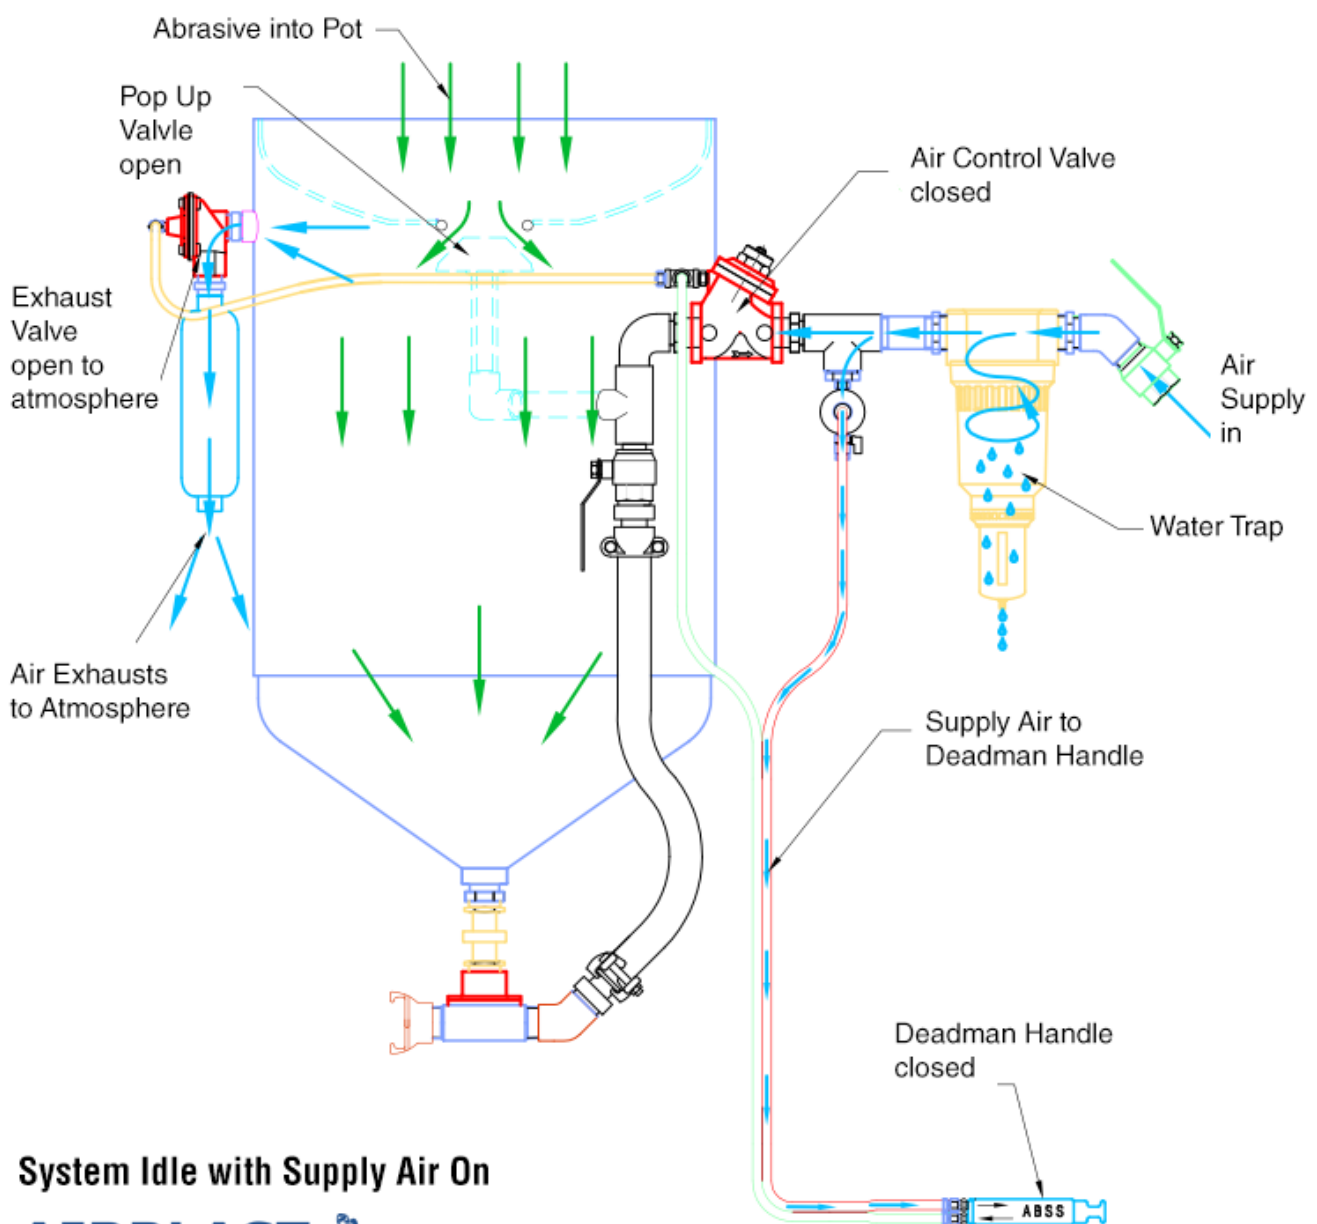

System Idle with Supply Air On



Section 3.0

Initial Set Up

- 3.1 Ensure the blast pot is in a stable position on a flat level surface, directly adjacent to the work area.
- 3.2 Uncoil the twinline hose and deadman handle assembly, and lay it out on a flat surface for its' full length.
- 3.3 Uncoil the blast hose assembly, and lay it out for its' full length directly adjacent to the uncoiled twinline assembly.
- 3.4 Position the deadman handle on the blast hose directly behind the nozzle holder, and attached the deadman handle to the blast hose using the two (2) cable ties provided. Ensure the handle is firmly attached, and trim the ends of the cable ties as short as possible.
- 3.5 Attach the twinline hose to the blast hose using cable ties/tape or similar, locating the ties/tape at approximately 1m to 1.5m intervals along the hose length, and as close to the hose coupling as possible.
- 3.6 The twinline hose should extend approximately 2m longer than the blast hose length at the coupling end.
- 3.7 Connect the blast hose coupling to the Micro Valve coupling, first checking that the coupling gaskets are correctly seated and are not worn. Check that the safety clip holes in the couplings align correctly, and that the safety clip itself is correctly fitted and prevents the coupling from inadvertently disconnecting.
- 3.8 Connect the two (2) loose ends of the twinline assembly to the blast control system by pushing the fittings directly together. The male end of the twinline connects to the female fitting located on the manifold block, and the female end connects to the male fitting located in the tee fitting directly adjacent to the Air Control Valve.

(Note: The twinline hose fittings use a dual action connection to prevent accidental disconnection. To disconnect the twinline fittings, first push the fittings inwards together, then pull back the outer sleeve on the female fitting. This will then allow the fittings to disconnect.)
- 3.9 Connect a suitably sized compressed air hose to the blast pot inlet ball valve using correctly fitted and sized compressed air fittings which feature a safety pin locking system. Airblast recommend the compressed air supply line be one size larger than the blast pot piping. For example, a pot with 1 ¼" piping should be connected to a 1 ½" supply line.

- 3.10 At this point, ensure that the pot air supply ball valve is in the closed position.
- 3.11 Connect the operator breathing air supply hose to the claw coupling ensuring at this point the ball valve is closed.

(Note: Refer to Section 1.12 of this manual for minimum breathing air quality requirements)

- 3.12 The blast pot is now ready for operation.



WARNING: THE INITIAL OPERATION AND ADJUSTMENT OF THE BLAST POT REQUIRES TWO (2) PERSONS, THE BLASTING OPERATOR AND AN ASSISTANT. UNDER NO CIRCUMSTANCES SHOULD THE BLASTING OPERATOR ATTEMPT TO CARRY OUT ANY ADJUSTMENTS WHILE CONTROLLING THE BLASTING NOZZLE.

Section 4.0

Operation

- 4.1 The following items must be carefully checked prior to commencing operation of the blast pot –
 - 4.1.1 The pot has been correctly set up as specified in Section 2.0 of this manual.
 - 4.1.2 The compressed air supply hose is securely attached to the blast pot inlet, and that the safety pins/clips are correctly fitted.
 - 4.1.3 The air compressor outlet valve must be closed.
 - 4.1.4 The blast pot inlet valve must be closed.
 - 4.1.5 The mini ball valve must be closed.
 - 4.1.6 Turn the control knob on the Micro Abrasive Valve clockwise until fully closed.
 - 4.1.7 Check that the deadman control handle's safety latch moves freely and prevents the handle from accidental activation.
 - 4.1.8 Carefully inspect the blast hose, hose fittings and blast nozzle for excessive wear and or damage. Replace worn/damaged components as necessary.
 - 4.1.9 Carefully inspect the blast operators' blast helmet, breathing air filters and breathing airlines to ensure that they are in good working order, and comply with the requirements as specified in Section 1.12 of this manual. Replace worn/damaged components as necessary.
- 4.2 Inspect the abrasive to be used, and ensure that it is clean, dry and flows easily. Damp abrasive will tend to clog the blasting system, and prevent it from operating correctly.
- 4.3 Fill the blast pot with the abrasive through the pop up valve opening located in the top of the pot, being careful not to over fill. The entire domed area of the pop up valve must be clearly visible after filling the blast pot.



WARNING: NEVER EXCEED THE PRESSURE VESSELS MAXIMUM PRESSURE RATING OF 8.6Bar (125psi) AS SHOWN ON THE PRESSURE GAUGE ATTACHED TO THE BLAST POT.

- 4.4 Turn on the air compressor, and bring it up to operating pressure and temperature in accordance with the manufacturer's instructions. The minimum compressed air pressure for the blast pot to activate correctly is 3.4Bar (50psi).
- 4.5 Slowly fully open the compressor outlet valve, and check the air supply line to the pot for leaks. If any leaks are apparent, shut down the compressor, bleed the pressure from the system, and repair any leaks.
- 4.6 Slowly fully open the blast pot inlet valve. The pot piping is now under pressure up to the Air Control Valve, as well as the out-going signal line (green) of the twinline to the deadman handle. Check the pressurised part of the control system for air leaks, and repair as necessary.
- 4.7 Open the ball valve to provide airflow to the operators blasting helmet, via the breathing air filters. (Refer Section 1.12 for further information).
- 4.8 The operator should now don the appropriate protective equipment, such as a blast suit, hearing protection, blasting helmet and leather gloves.
- 4.9 It is also strongly recommended that the assistant also wear hearing and eye protection.
- 4.9 Ensure that the areas' directly around the blast pot and the blast pot operator are clear of all personnel.
- 4.10 The operator now depresses the deadman control handle, which will send the return signal to open the Air Control Valve and close the Exhaust Valve. This allows high pressure air to enter the pressure vessel, lifting the pop up valve and pressurising the vessel.



WARNING: HIGH PRESSURE COMPRESSED AIR EXITING THE BLAST NOZZLE WILL GENERATE EXTREMELY HIGH LEVELS OF NOISE. IT IS STRONGLY RECOMMENDED THAT THE BLASTING OPERATOR, ASSISTANT, AND ANY OTHER PERSONNEL WITHIN THE IMMEDIATE VICINITY SHOULD WEAR APPROPRIATE HEARING PROTECTION.

- 4.11 After a slight delay, high pressure air will commence flowing from the blast nozzle. The assistant slowly open the Micro Abrasive Valve by turning the control knob anti-clockwise, until the operator signals that the desired abrasive media flow has been achieved.
- 4.12 Optimum abrasive flow is dependent upon abrasive type and size and blasting pressure, and can best be determined by operator experience. As a general rule, the operator should attempt to use the minimum amount of abrasive flow to achieve the fastest cleaning rate. It is normal for the airstream exiting the blast nozzle to be only slightly discoloured by the abrasive within the airstream.
- 4.13 To cease blasting, the operator simply releases the deadman control handle lever, which will de-energise the Air Control Valve and the Exhaust Valve, which in turn allows the pot vessel to de-pressurise and vent the internal compressed air out through the exhaust pipe.

Section 5.0

Shutdown & Storage

- 5.1 When operating in environments subject to varying temperature changes, or in high humidity, it is possible for condensation to form inside the pressure vessel. This condensation will dampen the abrasive, causing problems with the blast pot operation. It is recommended that the blast pot be emptied of abrasive at the end of each day to minimise this problem.
- 5.2 With the blast pot turned off, reduce the blast pressure down to approximately 275 – 350 Kpa (40-50psi), close the choke valve in the pusher line, and fully open the Micro Abrasive Valve.
- 5.3 Direct the blast nozzle into a drum/container, or towards the location where the abrasive is to be disposed of.
- 5.4 Hold the hose securely, and activate the blast system by closing the deadman handle. The blast hose will surge and recoil quite abruptly as the abrasive is forced out of the blast pot.
- 5.5 Once the blast pot has emptied, release the deadman handle to depressurise the blast pot. Open the choke valve, and note that the abrasive valve will need to be re-adjusted for blasting operations.
- 5.6 Close the air inlet valve on the blast pot, close the compressor air supply valve, and shutdown the air compressor.
- 5.7 Drain all compressor receivers, filters and water traps in accordance with the compressor manufacturer's instructions, and bleed all air from the airlines.
- 5.8 Cover the blast pot when not in use.

Section 6.0

Preventative Maintenance

Daily Inspections

- 6.1 With the compressed air turn off, carry out the following daily inspections:
 - 6.1.1 Drain any moisture from the Water Trap and inspect the internal element. Clean or replace as necessary.
 - 6.1.2 Inspect the blast hose for wear. Look for visual damage, and squeeze along the full length of the hose feeling for soft spots. A soft spot indicates wear, and the hose should be replaced.
 - 6.1.3 Check the hose coupling and nozzle holder, ensuring there is no sign of air leakage, and that the lock pins are correctly fitted and securely in place. Ensure that all retaining screws are securely in place.
 - 6.1.4 Remove the blast nozzle from the nozzle holder and check the condition of the nozzle washer. The washer should be replaced if it shows any sign of wear or damage.
 - 6.1.5 Carefully inspect the condition of the deadman handle, and ensure that the lever lock operates smoothly, and prevents the handle from accidental operation. The lever must not touch the valve plunger unless the lever lock is down and the handle fully depressed. The handle lever must fully return to the up position when released.

During blasting, have the blasting assistant do the following on a daily basis.

- 6.1.6 Check the control handle and twinline for leaks.
- 6.1.7 Check all couplings and coupling gaskets for leaks.
- 6.1.8 Check the nozzle holder and nozzle washer for leaks.
- 6.1.9 Carefully inspect the blast pot for leaks. If leaks are found around the pop up valve, top flange or fitting on the bottom of the pot cone, stop blasting immediately and carry out the necessary repairs. Failure to do so may cause irreparable damage to the blast machine.

Weekly Inspections

- 6.2 With the compressed air turned off, carry out the following on a weekly basis:
- 6.2.1 Remove the blast nozzle from the nozzle holder, and inspect the nozzle for wear/damage. Replace the nozzle if it is worn more than 1.5mm from its' original size, or if the liner is grooved or cracked.
 - 6.2.2 Carefully inspect the nozzle and nozzle holder threads for wear/damage. It is vital that the blast nozzle screws fully into place and seals firmly against the nozzle washer to prevent leaks and damage to the nozzle and nozzle holder.
 - 6.2.3 Visually inspect the Micro Abrasive Valve for any signs of wear, paying particular attention to the threaded section of the steel pipe nipple. Replace the pipe nipple at the first sign of wear and/or leakage.

During blasting, note the following:

- 6.2.4 Monitor the time taken for the blast pot to fully depressurise after deactivation. If the time has increased noticeably, check the exhaust pipe/muffler for damage and/or restrictions.

Monthly Inspections

- 6.3 With the compressed air turned off, carry out the following:
- 6.3.1 Check the condition of the pop up valves' mushroom head, and ensure that it is not worn or grooved. The pop up valve should be replaced at the first sign of significant wear.
 - 6.3.2 Inspect the rubber pop up valve seal located in the top flange. Check that the seal is not dried out, cracked or worn, and that the seal is seated correctly within the flange. Replace the seal at the first sign of significant wear.
 - 6.3.3 Remove the Micro Abrasive Valve by disconnecting the Tri Clover Clamp (Item 23). Dismantle the Micro Valve, and carefully inspect the hardened steel plunger and urethane sleeve for damage or wear. Replace items as necessary.
 - 6.3.4 Carefully inspect the internal section of the pipe nipple for wear, paying particular attention to the threaded ends. Replace the nipple if it appears worn or grooved.


Section 7.0

Troubleshooting

| Problem | Possible Cause/Remedy |
|---|---|
| No abrasive or air from the blast nozzle while the blast pot is pressurised. | Depressurise the blast pot, and after the pop up valve has dropped, remove the blast nozzle and check for any obstruction. Check that both the Micro Abrasive Valve and the pusher line choke valve are open. |
| Compressed air but no abrasive from the blast nozzle while the blast pot is pressurised | Micro Abrasive Valve may be closed, and require adjustment. Refer Section 3.11 No abrasive in the blast pot Abrasive may be damp, preventing proper flow. Clean pot out and refill with dry abrasive. Drain all moisture from moisture traps. Check Micro Abrasive Valve for obstructions. |
| Heavy abrasive flow | Micro Abrasive Valve may be fully open, and require adjustment. Refer Section 3.11 Check that the pusher line choke valve is open. |
| Abrasive surging | Note: Some surging is normal upon start up. Should the surging continue, adjust the Micro Abrasive Valve as per Section 3.11. |
| Blast Pot will not pressurise | Check that the air compressor is operating, and all air supply lines are open. Check that the deadman handle lever is correctly depressing the handle plunger Inspect the twinline hose for leaks, and repair as necessary. Check that the twinline is securely connected at the blast pot. Check the deadman handle for air leaks with the lever depressed. No air should leak from the handle with the lever depressed. Inspect the exhaust control line (Item 4) for leaks between the Air Control Valve (Item 15) and the Exhaust Valve (Item 16) Dismantle the Exhaust Valve (Item 16) and check the diaphragm for wear/holes/tears, and replace if necessary. Check that the pop up valve is not worn or out of alignment, and is seating correctly. Replace/adjust as necessary. |
| Blast pot will not depressurise, or depressurises slowly | Check the Exhaust Valve (item 16) and exhaust piping for obstructions. Check that the return air on the twinline is exhausting air from the deadman handle around the plunger when the lever is released. |
| Intermittent abrasive flow | Abrasive may be damp, preventing proper flow. Clean pot out and refill with dry abrasive. Drain all moisture from moisture traps. Excessive dust and fines in abrasive. Refill the blast pot with new abrasive. |


Section 8.0


Replacement Parts

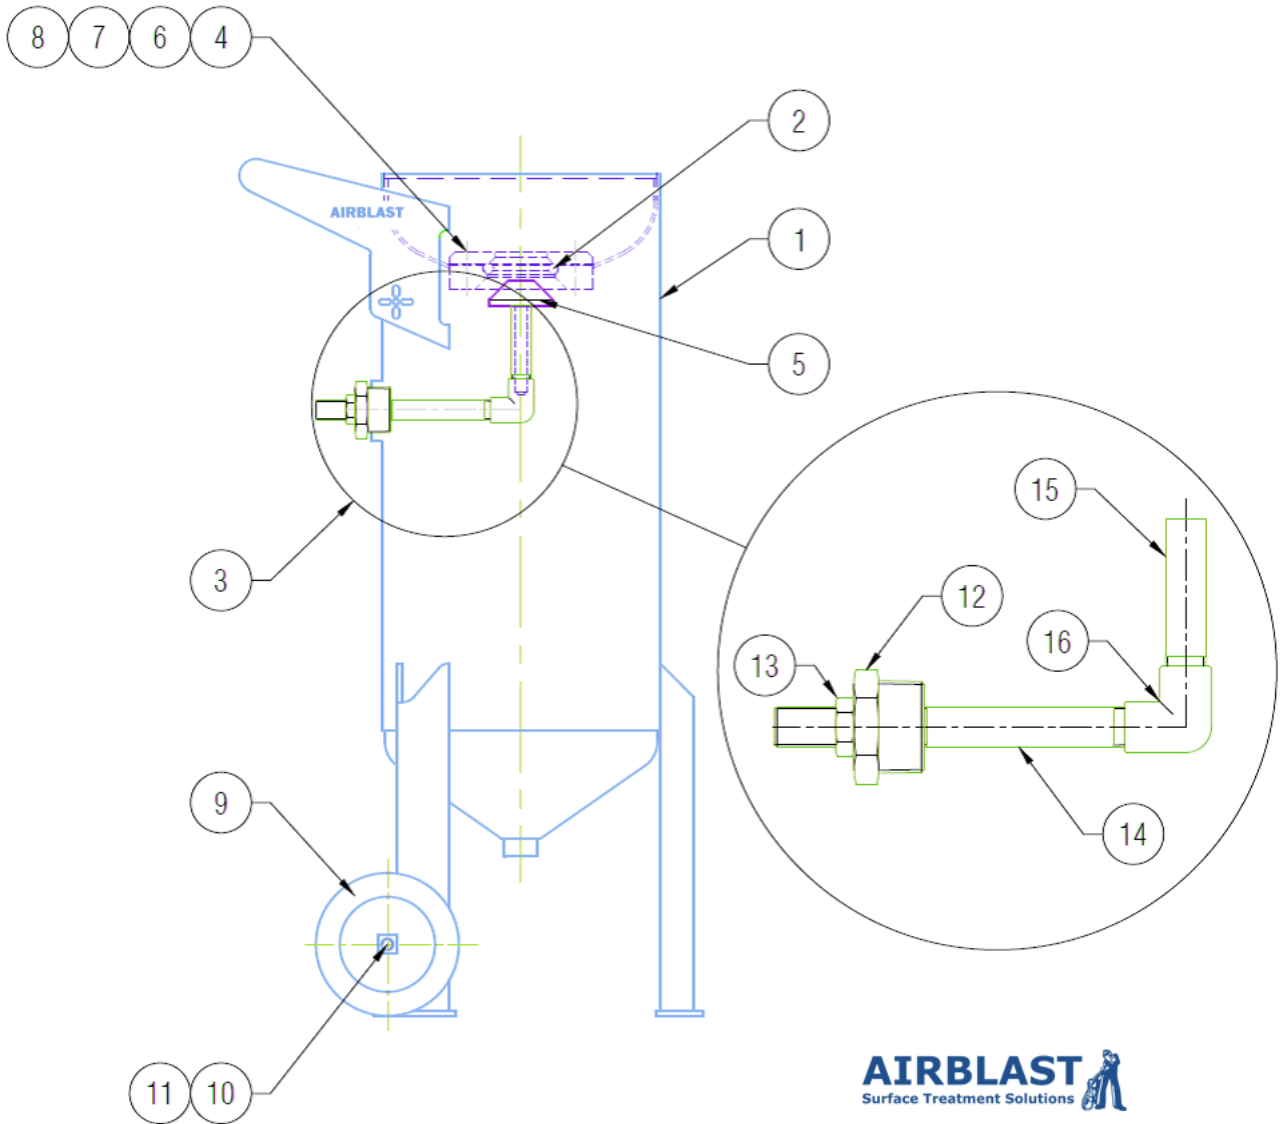

| BARE POT ASSEMBLY | | MODEL | AA-40 |
|--------------------------|---------------------------------|----------|----------------|
| | | ASSY NO. | A201703 |
| | Description | Quantity | Part Number |
| 1 | BARE POT - SUB ASSEMBLY | 1 | A201727 |
| 2 | O RING - SMALL | 1 | O201291 |
| 3 | ASSEMBLY-INTERNAL PIPING | 1 | A202493 |
| 4 | RETAINING FLANGE - SMALL | 1 | F930035 |
| 5 | POP UP VALVE - SMALL | 1 | A201289 |
| 6 | GASKET-FIBRE-50NB-TABLE E | 1 | G202410 |
| 7 | BOLT-HEX HEAD-M16 x 35mm | 4 | n/a |
| 8 | WASHER - FLAT - 16mm | 4 | n/a |
| 9 | WHEEL - 152mm DIAMETER | 2 | n/a |
| 10 | WASHER - FLAT - 12mm | 2 | n/a |
| 11 | NUT - NYLOC - 12mm | 2 | n/a |
| 12 | BUSH-HEX- 1/2" BSP X 1/2" BSP | 1 | B201543 |
| 13 | NUT-LOCK - 1/2" BSP | 1 | SBN15G |
| 14 | PIPE PIECE - 1/2" BSP - SPECIAL | 1 | P202488 |
| 15 | PIPE PIECE - 1/2" BSP - SPECIAL | 1 | P202492 |
| 16 | ELBOW - F & F - 1/2" BSP | 1 | E201477 |



8.2 Pot Package A

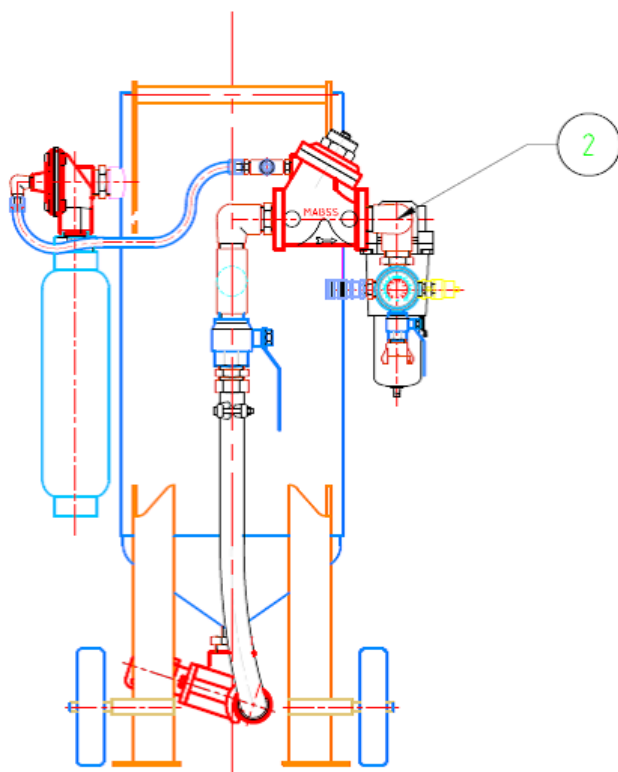

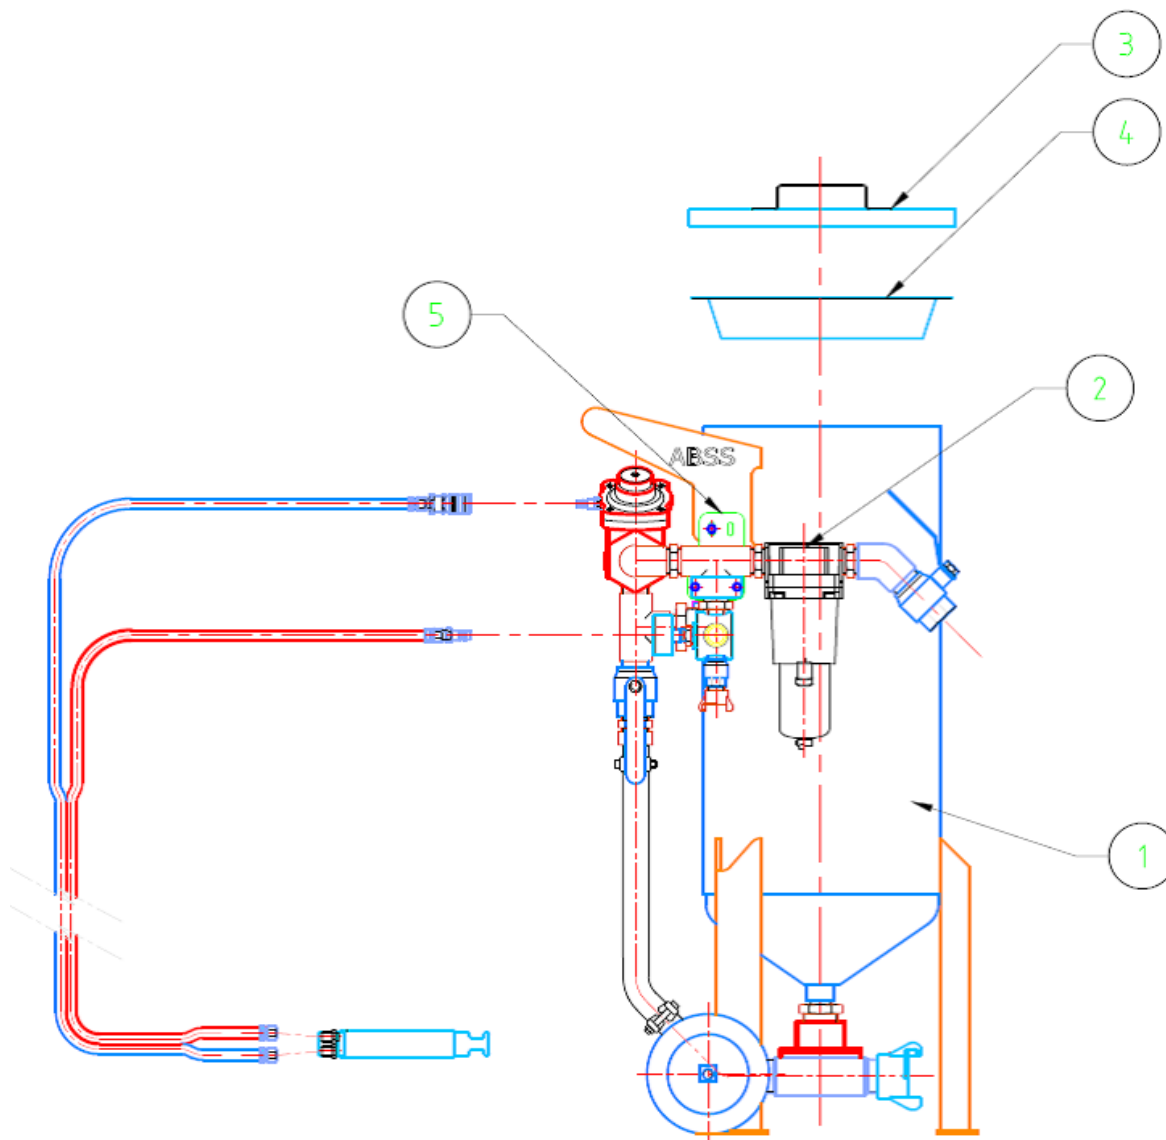


| POT PACKAGE A | | MODEL | AA-40 |
|---------------|---------------------------------|----------|-------------|
| | | ASSY NO. | ABS40 |
| | Description | Quantity | Part Number |
| 1 | ASSY-AUTO EXHAUST PIPING-1" BSP | 1 | A201703 |
| 2 | O RING - SMALL | 1 | A201319 |
| 3 | LID | 1 | L950225 |
| 4 | SCREEN | 1 | S950226 |
| 5 | ASSY - PIPING SUPPORT BRACKET | 1 | A202404 |
| 6 | KIT-LABELS-40L POT ASSEMBLY | 1 | A210082 |
| 7 | OPERATING MANUAL | 1 | OM-BP003 |
| 8 | CONTAINER - OPERATING MANUAL | 1 | 9000-14 |

8.3 Auto Exhaust Piping Assembly

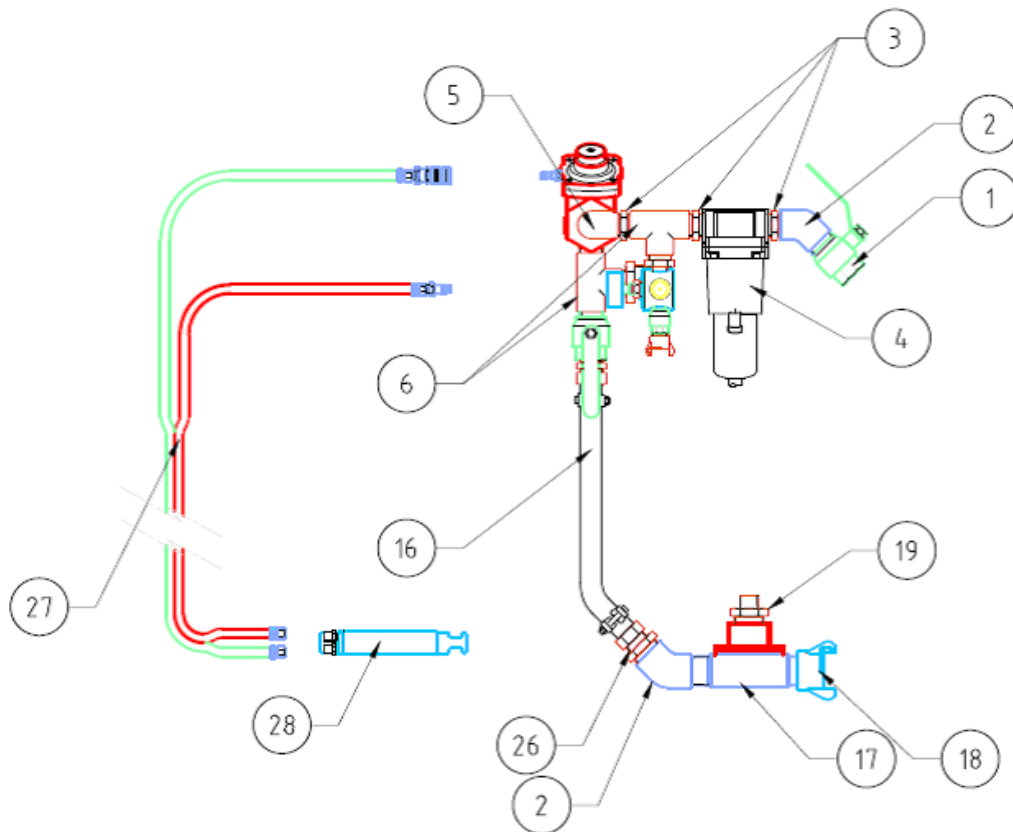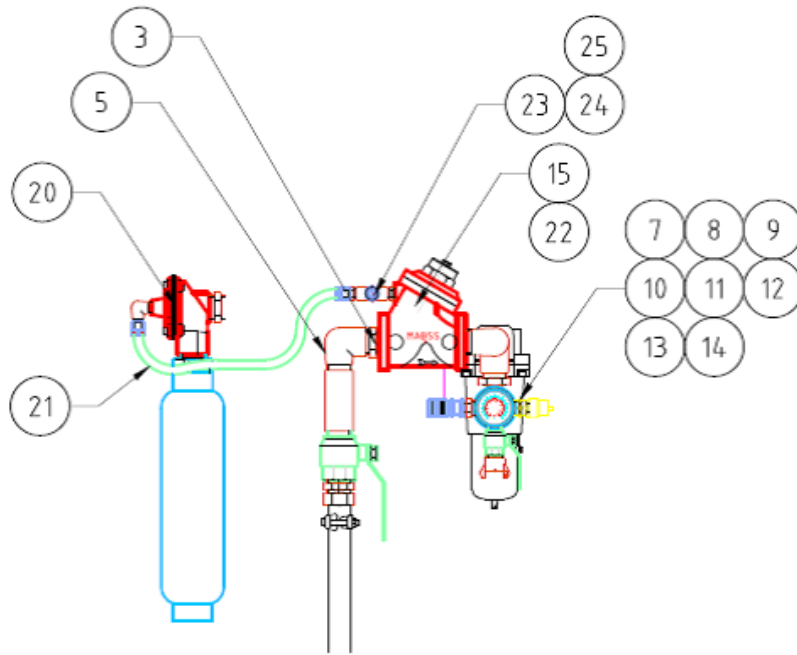

| AUTO EXHAUST POT PIPING ASSEMBLY | | MODEL | AA-40 |
|----------------------------------|---|----------|---------------|
| | | ASSY NO. | A201319 |
| | Description | Qty | Part Number |
| 1 | VALVE - BALL - 1" BSP | 1 | V201497 |
| 2 | ELBOW - 45 DEG - STEEL - 1" BSP - F & F | 2 | E201483 |
| 3 | NIPPLE - HEXAGON - 1" BSP | 2 | N201497- |
| 4 | WATER TRAP - 1" BSP | 1 | AF60-10 |
| 5 | ELBOW - 90 DEGREE - M & F - 1" BSP | 1 | E201463 |
| 6 | TEE - 1" BSP | 2 | T201522 |
| 7 | MANIFOLD - 5 WAY | 1 | M201412 |
| 8 | NIPPLE - REDUCING - 1" BSP X 1/2" BSP | 1 | N201508 |
| 9 | VALVE - PRESSURE RELIEF - 125PSI - 1/2" BSP | 1 | V201614 |
| 10 | BUSH - REDUCING - 1/2" BSP x 1/4" BSP | 2 | B201531 |
| 11 | COUPLING-QUICK CONNECT-FEMALE-1/4" | 1 | C201194 |
| 12 | GAUGE - PRESSURE - 0-150PSI - 1/4" REAR ENTRY | 1 | G202087 |
| 13 | VALVE - BALL - M & F - 1/2" BSP | 1 | V201641 |
| 14 | COUPLING-CLAW-TYPE A-1/2" BSP MALE | 1 | 08/000/09/000 |
| 15 | ASSY-VALVE-AIR CONTROL-1 1/4" BSP | 1 | A201064 |
| 16 | ASSY-PUSHER LINE-1" BSP | 1 | A201286 |
| 17 | ASSY-VALVE-ABRASIVE CONTROL- 1 1/4" BSP | 1 | A201216 |
| 18 | COUPLING - POT - NYLON | 1 | NTC-1 |
| 19 | NIPPLE-REDUCING-1 1/4" BSP X 3/4" BSP | 1 | N201510 |
| 20 | ASSY-EXHAUST VALVE | 1 | A201494 |
| 21 | ASSY-EXHAUST CONTROL LINE | 1 | A201216 |
| 22 | BREATHER-AIR CONTROL VALVE-1/8" BSP | 1 | B201621 |
| 23 | NIPPLE-HEXAGON-1/4" BSP | 2 | N201493 |
| 24 | TEE-STEEL-1/4" BSP | 1 | T201618 |
| 25 | COUPLING-QUICK CONNECT-MALE-1/4" | 1 | C201195 |
| 26 | NIPPLE-REDUCING-1 1/4" X 1" BSP | 1 | N201511 |
| 27 | ASSY-TWINLINE-12M | 1 | A201190-1 |
| 28 | HANDLE-DEADMAN | 1 | A990010 |

8.4 Air Control Valve Assembly


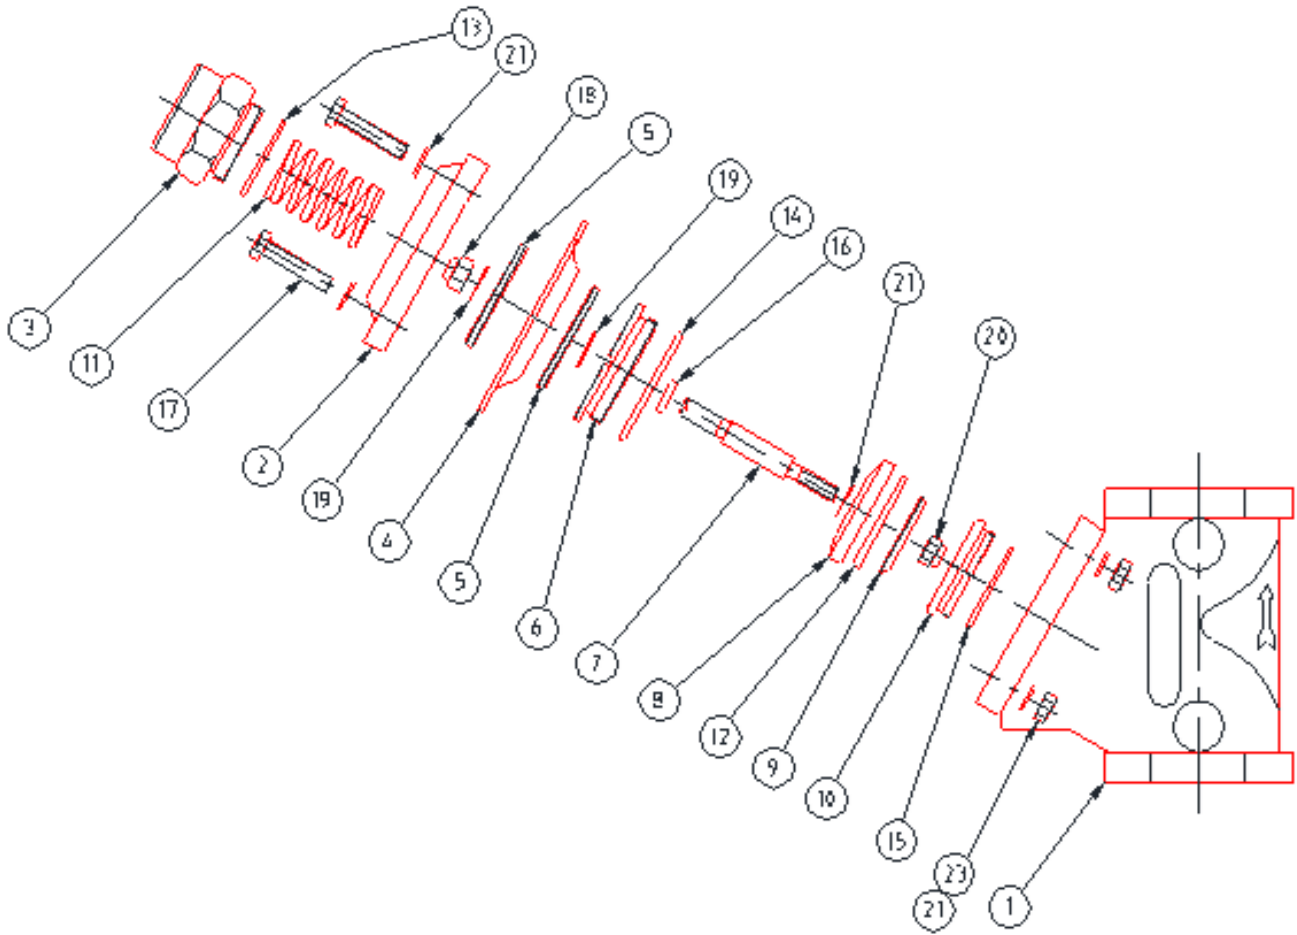


| AUTO AIR VALVE - 1 1/4" | | MODEL | AA-40 |
|--------------------------------|-------------------------------------|----------|----------------|
| | | ASSY NO. | A201064 |
| | Description | Qty | Part Number |
| 1 | BODY - AIR CONTROL VALVE - 1 1/4" | 1 | B201065 |
| 2 | COVER - AIR CONTROL VALVE | 1 | C201066 |
| 3 | CAP - AIR CONTROL VALVE | 1 | C201067 |
| 4 | DIAPHRAGM - AIR CONTROL VALVE | 1 | D201068 |
| 5 | WASHER - FLAT | 2 | W201069 |
| 6 | BUSH - INNER | 1 | B201070 |
| 7 | SHAFT | 1 | S201071 |
| 8 | SEAT HOLDER | 1 | S201072 |
| 9 | RETAINER | 1 | R201073 |
| 10 | GUIDE - BUSH | 1 | B201074 |
| 11 | SPRING - AIR CONTROL VALVE | 1 | S201075 |
| 12 | GASKET | 1 | G201076 |
| 13 | O RING | 1 | AS568-025 |
| 14 | O RING | 1 | AS568-132 |
| 15 | O RING | 1 | AS568-028 |
| 16 | O RING | 1 | AS568-110 |
| 17 | BOLT-HEX HEAD-1/4" UNC X 1 1/2" | 4 | |
| 18 | NUT-NYLOC-5/16" UNF | 1 | |
| 19 | WASHER-FLAT-5/16" DIA X 0.5MM BRASS | 1 | |
| 20 | NUT-NYLOC-1/4" UNF-ZINC | 1 | |
| 21 | WASHER-FLAT-1/4" DIA-ZINC | 8 | |
| 22 | WASHER-FLAT-1/4" DIA X 0.5MM BRASS | 1 | |
| 23 | NUT-NYLOC-1/4" UNC-ZINC | 4 | |

8.5 Air Control Valve Service Kit


| SERVICE KIT-AUTO AIR VALVE-1 1/4" | | MODEL | AA-40 |
|-----------------------------------|-------------------------------------|----------|-------------|
| | | ASSY NO. | A201400 |
| | Description | Qty | Part Number |
| 4 | DIAPHRAGM - AIR CONTROL VALVE | 1 | D201068 |
| 12 | GASKET | 1 | G201076 |
| 13 | O RING | 1 | AS568-025 |
| 14 | O RING | 1 | AS568-132 |
| 15 | O RING | 1 | AS568-028 |
| 16 | O RING | 1 | AS568-110 |
| 19 | WASHER-FLAT-5/16" DIA X 0.5MM BRASS | 1 | |
| 20 | NUT-NYLOC-1/4" UNF-ZINC | 1 | |
| 22 | WASHER-FLAT-1/4" DIA X 0.5MM BRASS | 1 | |

8.6 Exhaust Valve

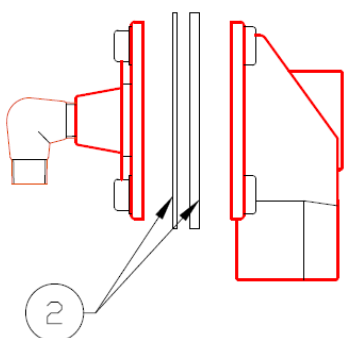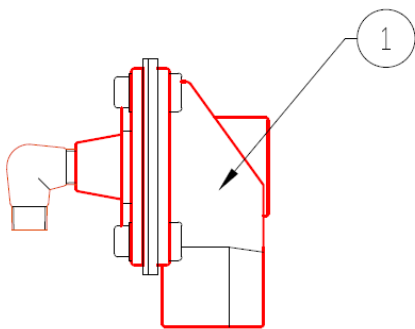


| | | | |
|---------------------------|-----------------------|----------|----------------|
| EXHAUST VALVE - 1" | | MODEL | AA-40 |
| | | ASSY NO. | A201282 |
| | Description | Qty | Part Number |
| 1 | ASSY-EXHAUST VALVE-1" | 1 | A201282 |
| 2 | KIT - DIAPHRAGM | 1 | A201283 |

8.7 Exhaust Valve & Muffler Assembly

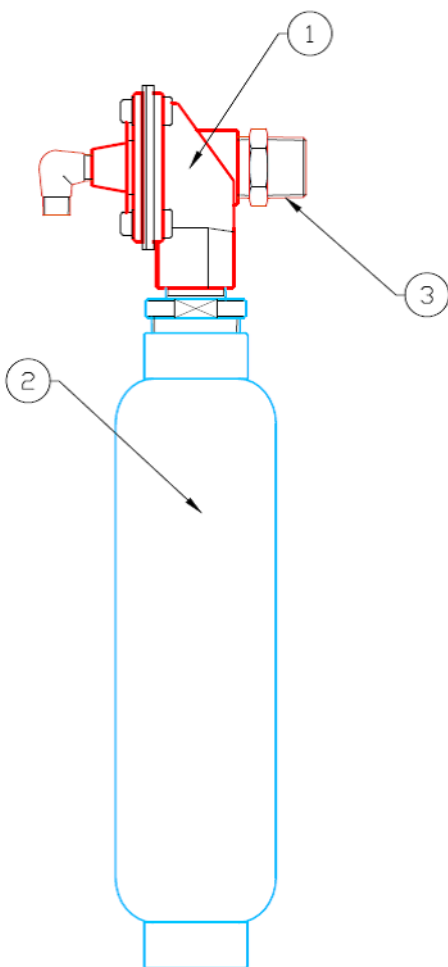

| | | | |
|---|--------------------------|----------|----------------|
| EXHAUST VALVE & MUFFLER ASSY | | MODEL | AA-40 |
| | | ASSY NO. | A202494 |
| | Description | Qty | Part Number |
| 1 | VALVE-EXHAUST-1" | 1 | A201282 |
| 2 | EXHAUST MUFFLER ASSEMBLY | 1 | A201565 |
| 3 | NIPPLE -HEXAGON – 1" BSP | 1 | N201497 |

8.8 Exhaust & Muffler Assembly

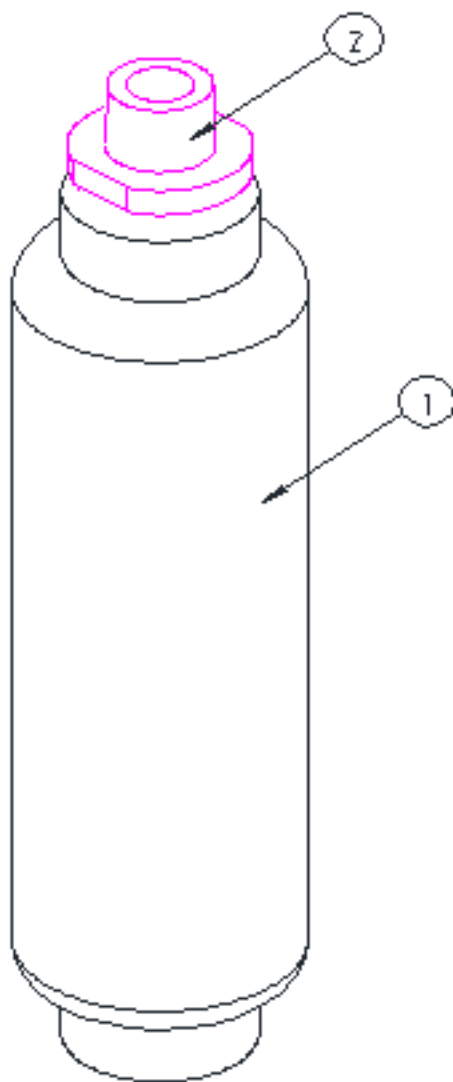


| EXHAUST MUFFLER ASSY | | MODEL | AA-40 |
|----------------------|---------------|----------|-------------|
| | | ASSY NO. | A201565 |
| | Description | Qty | Part Number |
| 1 | SILENCER BODY | 1 | S201566 |
| 2 | DIFFUSER TUBE | 1 | S201567 |

8.9 Exhaust Control Line




| EXHAUST CONTROL LINE | | MODEL | AA-40 |
|----------------------|--|----------|-------------|
| | | ASSY NO. | A201611 |
| | Description | Qty | Part Number |
| 1 | AIRLINE - 1/4" (6MM) ID | 0.4 | A201627 |
| 2 | HOSE CLIP | 2 | OTK08 |
| 3 | NUT & TAIL - 1/4" BSP FEMALE X 1/4" (6MM) BARB | 2 | N201196 |

8.10 Pusher Line

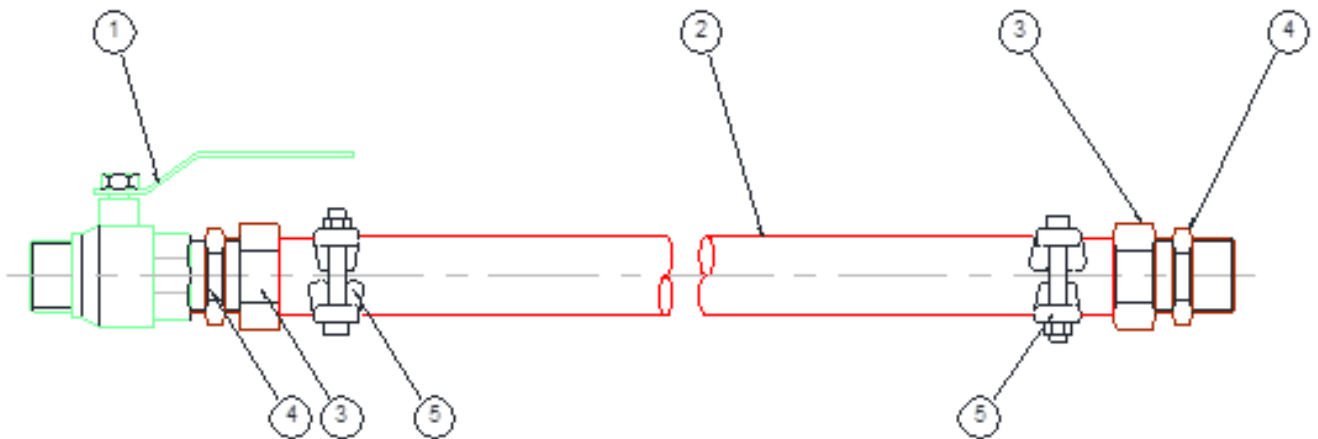

| EXHAUST CONTROL LINE | | MODEL | AA-40 |
|----------------------|----------------------------|----------|-------------|
| | | ASSY NO. | A201285 |
| | Description | Qty | Part Number |
| 1 | BALL VALVE - M & F - 1" | 1 | V201463 |
| 2 | AIR HOSE - 1" ID | 0.7 | A190025 |
| 3 | SWIVEL-HOSE TAIL-1" NPT | 2 | DPFL100 |
| 4 | NIPPLE-HEX-1" BSP X 1" NPT | 2 | N210914 |
| 5 | CLAMP-DOUBLE BOLT | 2 | SL49 |

8.11 Micro Abrasive Valve

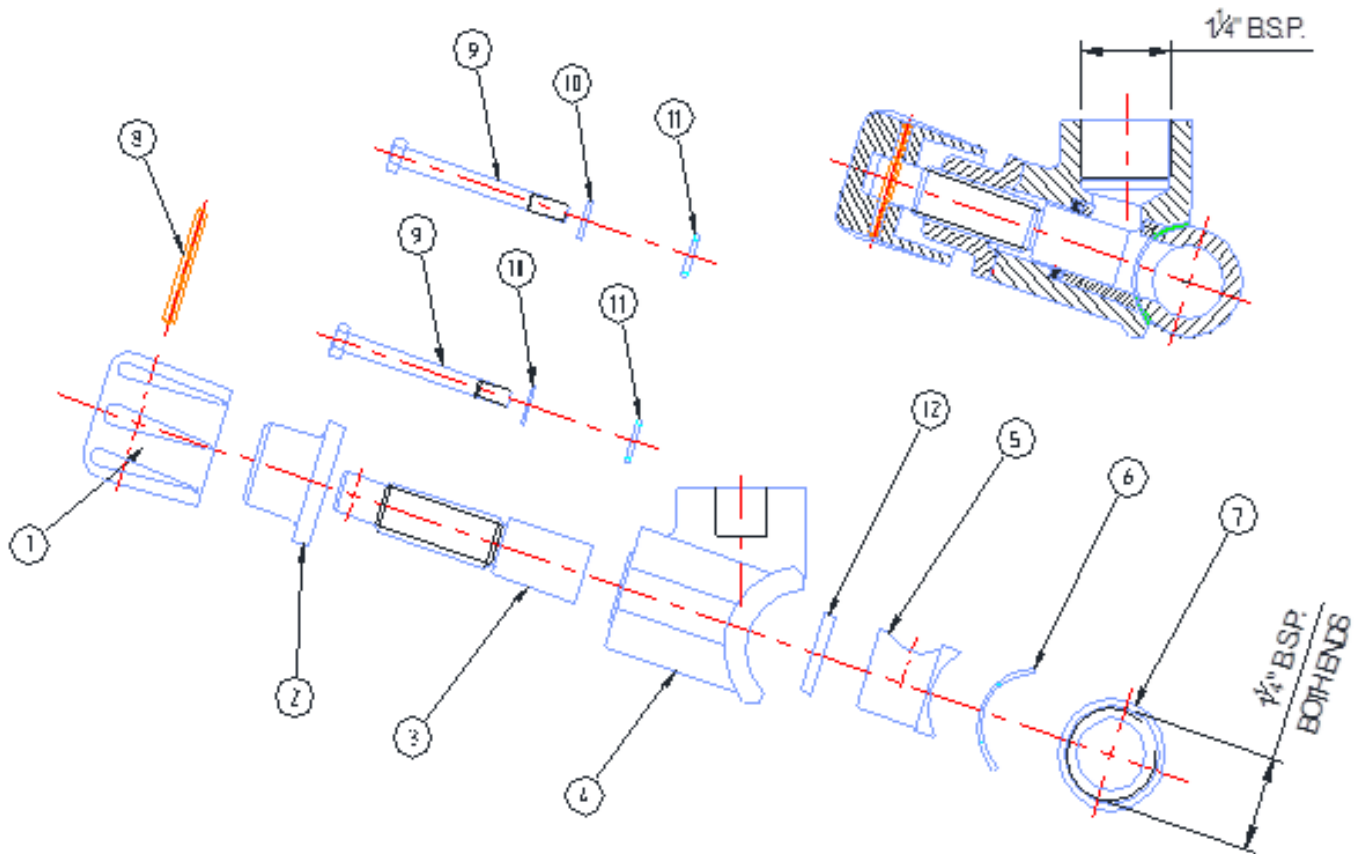


| MICRO VALVE - 1 1/4" | | MODEL | AA-40 |
|----------------------|----------------------------------|----------|-------------|
| | | ASSY NO. | A201216 |
| | Description | Qty | Part Number |
| 1 | CONTROL KNOB | 1 | C201217 |
| 2 | VALVE CAP | 1 | V201218 |
| 3 | PLUNGER | 1 | P201219 |
| 4 | VALVE BODY - 1 1/4" | 1 | V201220 |
| 5 | SLEEVE | 1 | S201221 |
| 6 | GASKET | 1 | G201222 |
| 7 | PIPE NIPPLE - 1 1/4" X 1 1/4" | 1 | P201223 |
| 8 | PIN-5mm X 50mm | 1 | n/a |
| 9 | BOLT-HEX HEAD-5/16" UNC X 3 1/4" | 2 | n/a |
| 10 | WASHER-FLAT-5/16" | 2 | n/a |
| 11 | O RING-14mm ID x 3mm | 2 | n/a |
| 12 | SEAL-LIP | 1 | UN 25-35-5 |

8.12 Micro Abrasive Valve

| FULL SERVICE KIT-MICRO VALVE-1 1/4" | | MODEL | AA-40 |
|--|-------------------|----------|----------------|
| | | ASSY NO. | A201325 |
| | Description | Qty | Part Number |
| 3 | PLUNGER | 1 | P201219 |
| 5 | SLEEVE | 1 | S201221 |
| 6 | GASKET | 1 | G201222 |
| 8 | PIN-5mm x 50mm | 1 | n/a |
| 11 | O RING-14mm x 3mm | 2 | n/a |
| 12 | SEAL-LIP | 1 | UN 25-35-5 |


| SOFT SERVICE KIT-MICRO VALVE-1 1/4" | | MODEL | AA-40 |
|--|----------------|----------|----------------|
| | | ASSY NO. | A201454 |
| | Description | Qty | Part Number |
| 3 | PLUNGER | 1 | S201221 |
| 5 | SLEEVE | 1 | G201222 |
| 6 | GASKET | 2 | n/a |
| 8 | PIN-5mm x 50mm | 1 | UN 25-35-5 |

8.13 Twinline Assembly

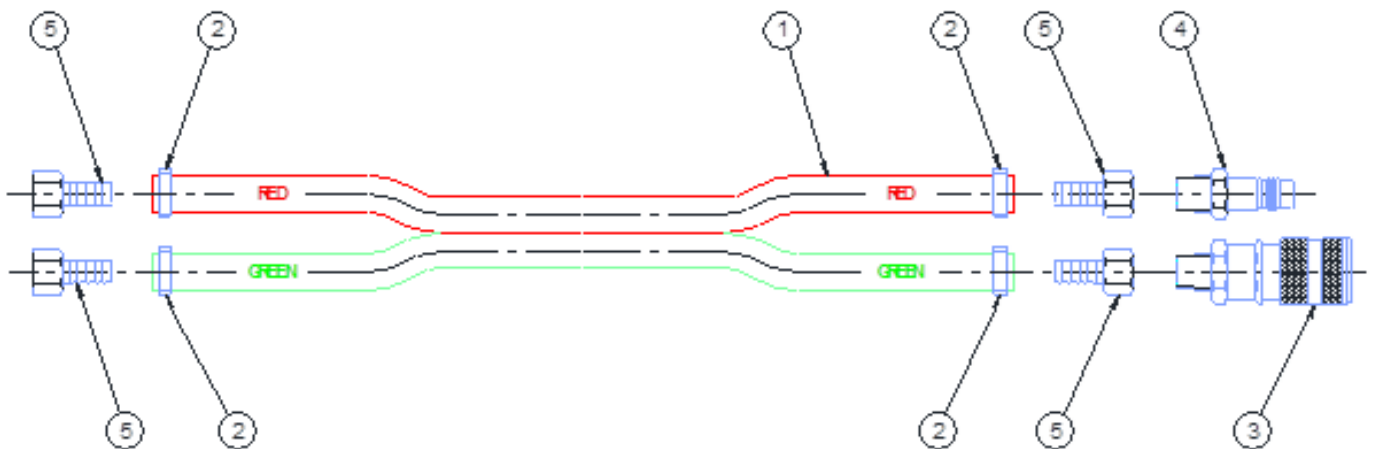

| TWINLINE HOSE ASSEMBLY | | MODEL | AA-40 |
|------------------------|--|----------|------------------|
| | | ASSY NO. | A201190-1 |
| | Description | Qty | Part Number |
| 1 | DEADMAN TWINLINE HOSE 6mm I/D | 12 | |
| 2 | O-CLIP (11mm - 13mm) | 4 | |
| 3 | TWO ACTION FEMALE COUPLING C/W 1-4" BSP MALE FITTING | 1 | C201194 |
| 4 | TWO ACTION MALE ADAPTOR C/W 1-4" BSP MALE FITTING | 1 | C201195 |
| 5 | NUT & TAIL 1-4" BSP FEMALE x 6 NB BARB | 4 | N201215 |

8.14 Moisture Trap Assembly

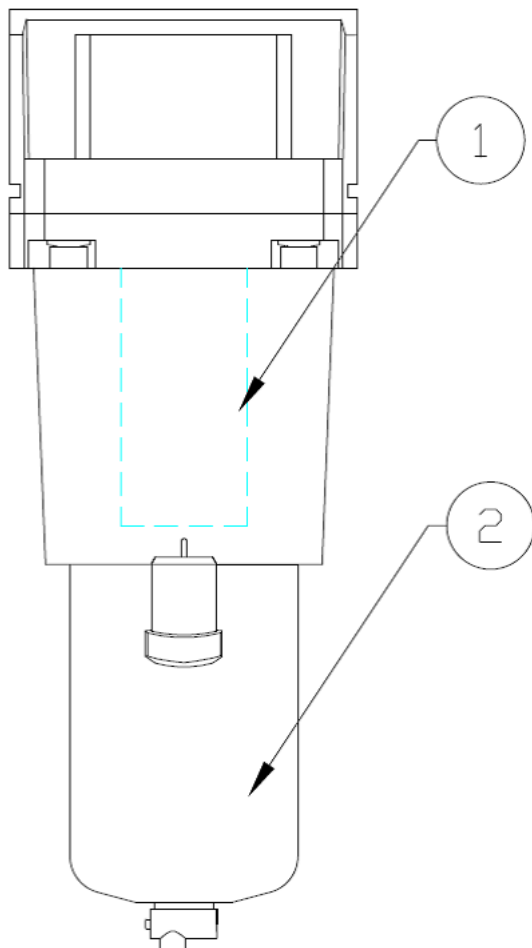

| MOISTURE TRAP ASSEMBLY | | MODEL | AA-40 |
|------------------------|---------------------------|----------|----------------|
| | | ASSY NO. | AF60-10 |
| | Description | Qty | Part Number |
| 1 | REPLACEMENT ELEMENT | 1 | AF60P-060S |
| 2 | REPLACEMENT BOWL ASSEMBLY | 1 | C4SF-A |

